


Height of Headrest
(optional feature)
Lift up or push down on headrest to adjust height.



Angle of Headrest
(optional feature)
Twist headrest to adjust tilt angle.

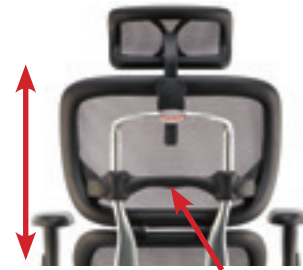

Ratchet Back Height Adjustment
Lift up on frame of backrest to raise or lower.



Armrest Up & Down Adjustment
Press button located underneath the arm-pad and lift or press down to adjust armrests.



Seat Height Adjustment
Lift front button on right under seat to adjust height.

NOTE: The headrest may be removed and a plug inserted in its place.



Seat Slider Adjustment
Lift rear button on left under seat to adjust seat slider.



Backrest Tilt Angle Adjustment
Lift front button on left under seat to adjust the tilt angle of backrest.



Arm-pad Swivel Adjustment
Manually move the arm-pad to swivel.



Backrest Tilt Tension Adjustment
Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.