



Arm-pad Swivel Adjustment
Manually move the arm-pad to swivel.



Armrest Up & Down Adjustment
Press button located underneath the arm-pad and lift or press down to adjust armrests.



Backrest Tilt Angle Adjustment
Lift front button on left under seat to adjust the tilt angle of backrest.



Ratchet Back Height Adjustment
Lift frame of backrest to adjust height.



Seat Slider Adjustment
Lift rear button on left under seat to adjust seat slider.



Seat Height Adjustment
Lift button on right under seat to adjust height.



Backrest Tilt Tension Adjustment
Twist knob under seat to adjust backrest tension. Twisting clockwise increases tension.