

OPS-K14 Parts



Step 1:

Assembly Process – Back

*Place the seat flat *Put the chair back into the hole of mechanism *Align the 3 screws with the holes and put them in *Fasten the 3 screws.










<u>Step 2:</u> Assembly Process – Arm

*Attach the arms with seat pan and tighten (2) screws







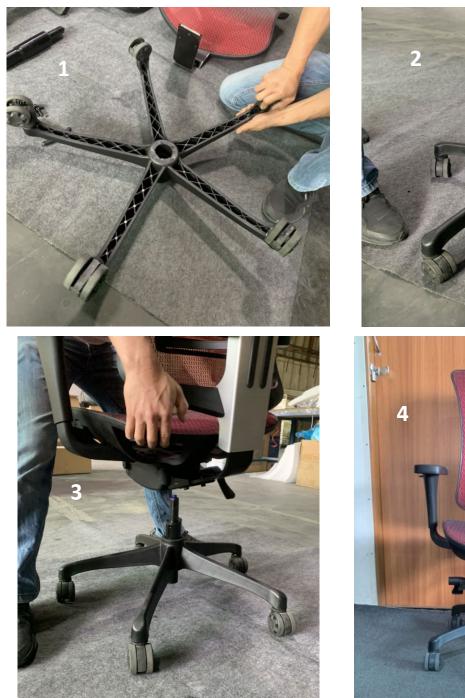



Step 3: Attach the casters to the base by firmly pushing in

<u>Step 4:</u> Put the cylinder into the base

<u>Step 5:</u> Put the upper body into the cylinder